 


BTM

Initial software update steps

1, Power supply: plug adapter, network connection cable (next to the power switch)

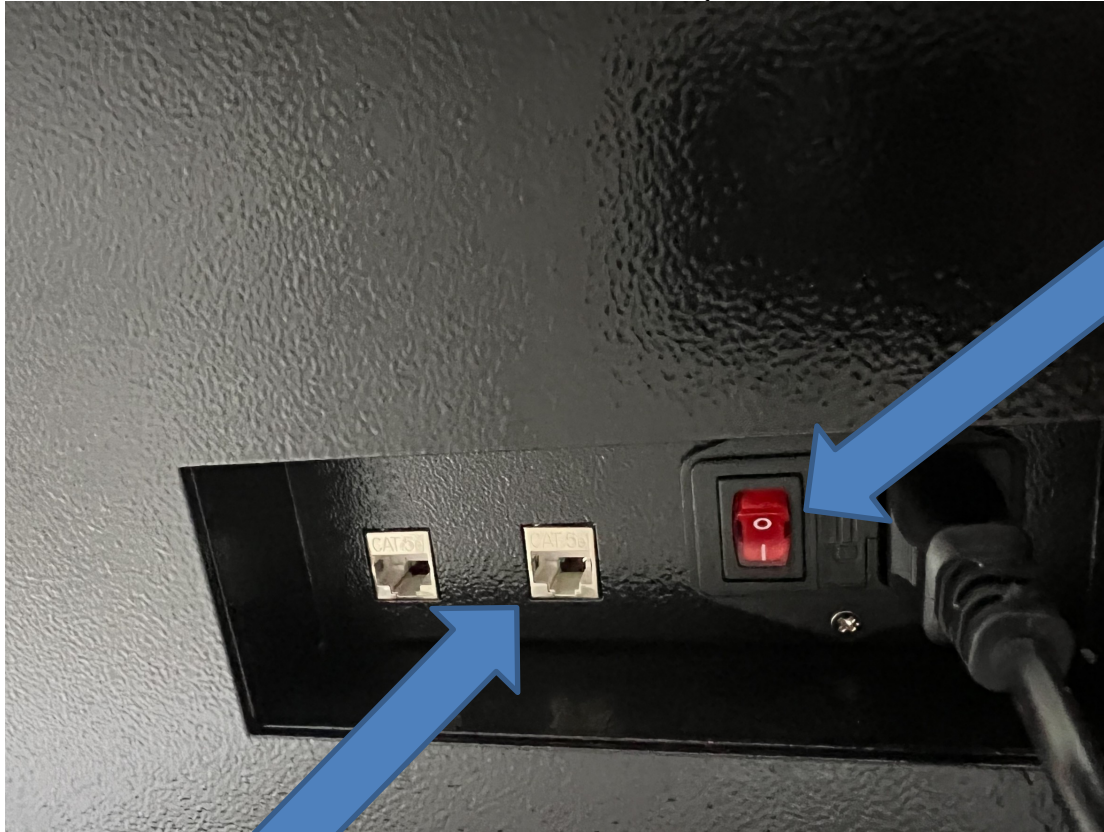


Turn on the main
power(to light up)

Below the back of the BTM

network cable

2, Key: Glued to the light box

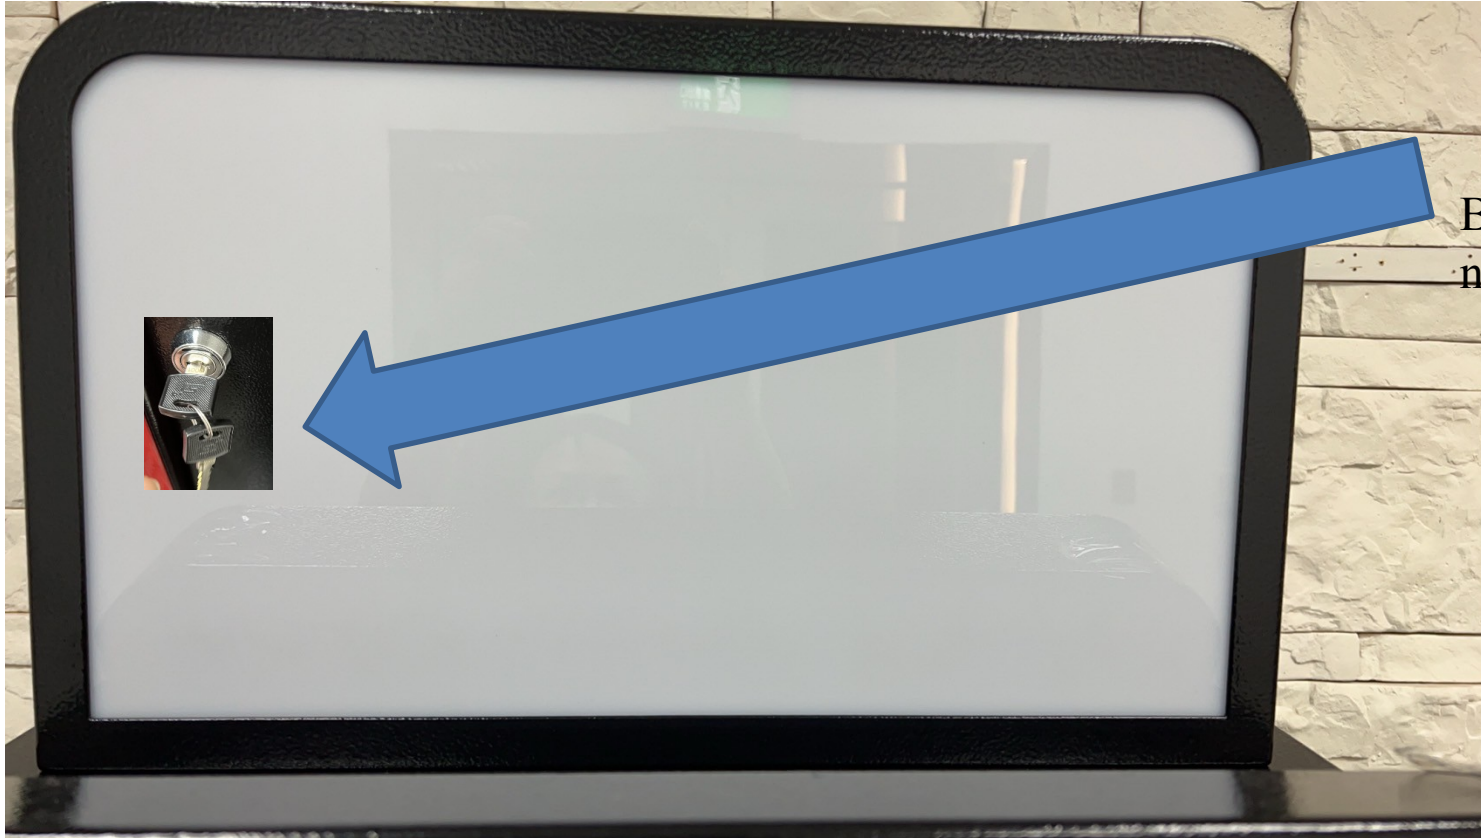

Because there is customs, the key may need to find the location

3, Key: Open the BTM door



Turn left after inserting the key




There is a push rod under the key, press down, the door will open

4, Both switches of the main power supply must be turned on



- 5, The computer automatically turns on
- 6, Automatic login to Windows screen
- 7, Automate Teamviewer
- 8, Location ID ,password automatic login
- 9, Numiner Remote update by software team

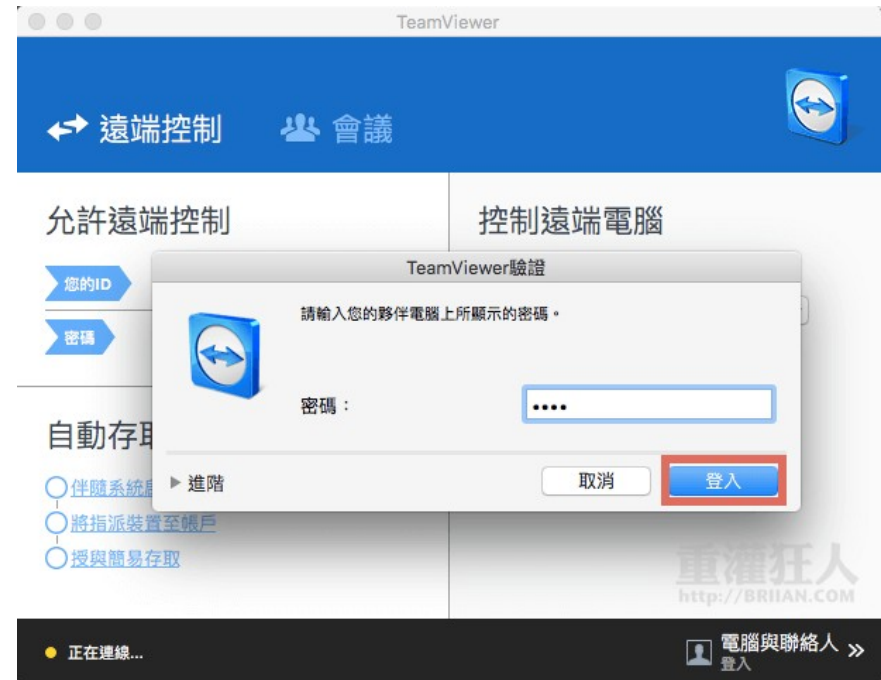

Thanks!